


**FLOOR COVERING WORK SCOPE**

1. REMOVE AND DISPOSE OF EXISTING VCT, CARPET, SHEET VINYL, RUBBER BASE AND TRIM. THERE ARE MULTIPLE LAYERS OF FLOORING TO REMOVE AT SOME LOCATIONS.
2. CLEAN AND PREP THE CONCRETE SUBSTRATE.
3. INSTALL NEW VCT AND CARPET TILE PER DRAWING & SPECIFICATIONS
4. INSTALL NEW 4" RUBBER BASE AT SAME LOCATIONS AS EXISTING BASE
5. CONTRACTOR TO FIELD VERIFY ALL DIMENSIONS AND QUANTITIES
6. FURNITURE AND APPLIANCES WILL BE REMOVED BY SOU

**WORK AREA**

**ACM MASTIC REMOVAL AT V110 BY SOU**

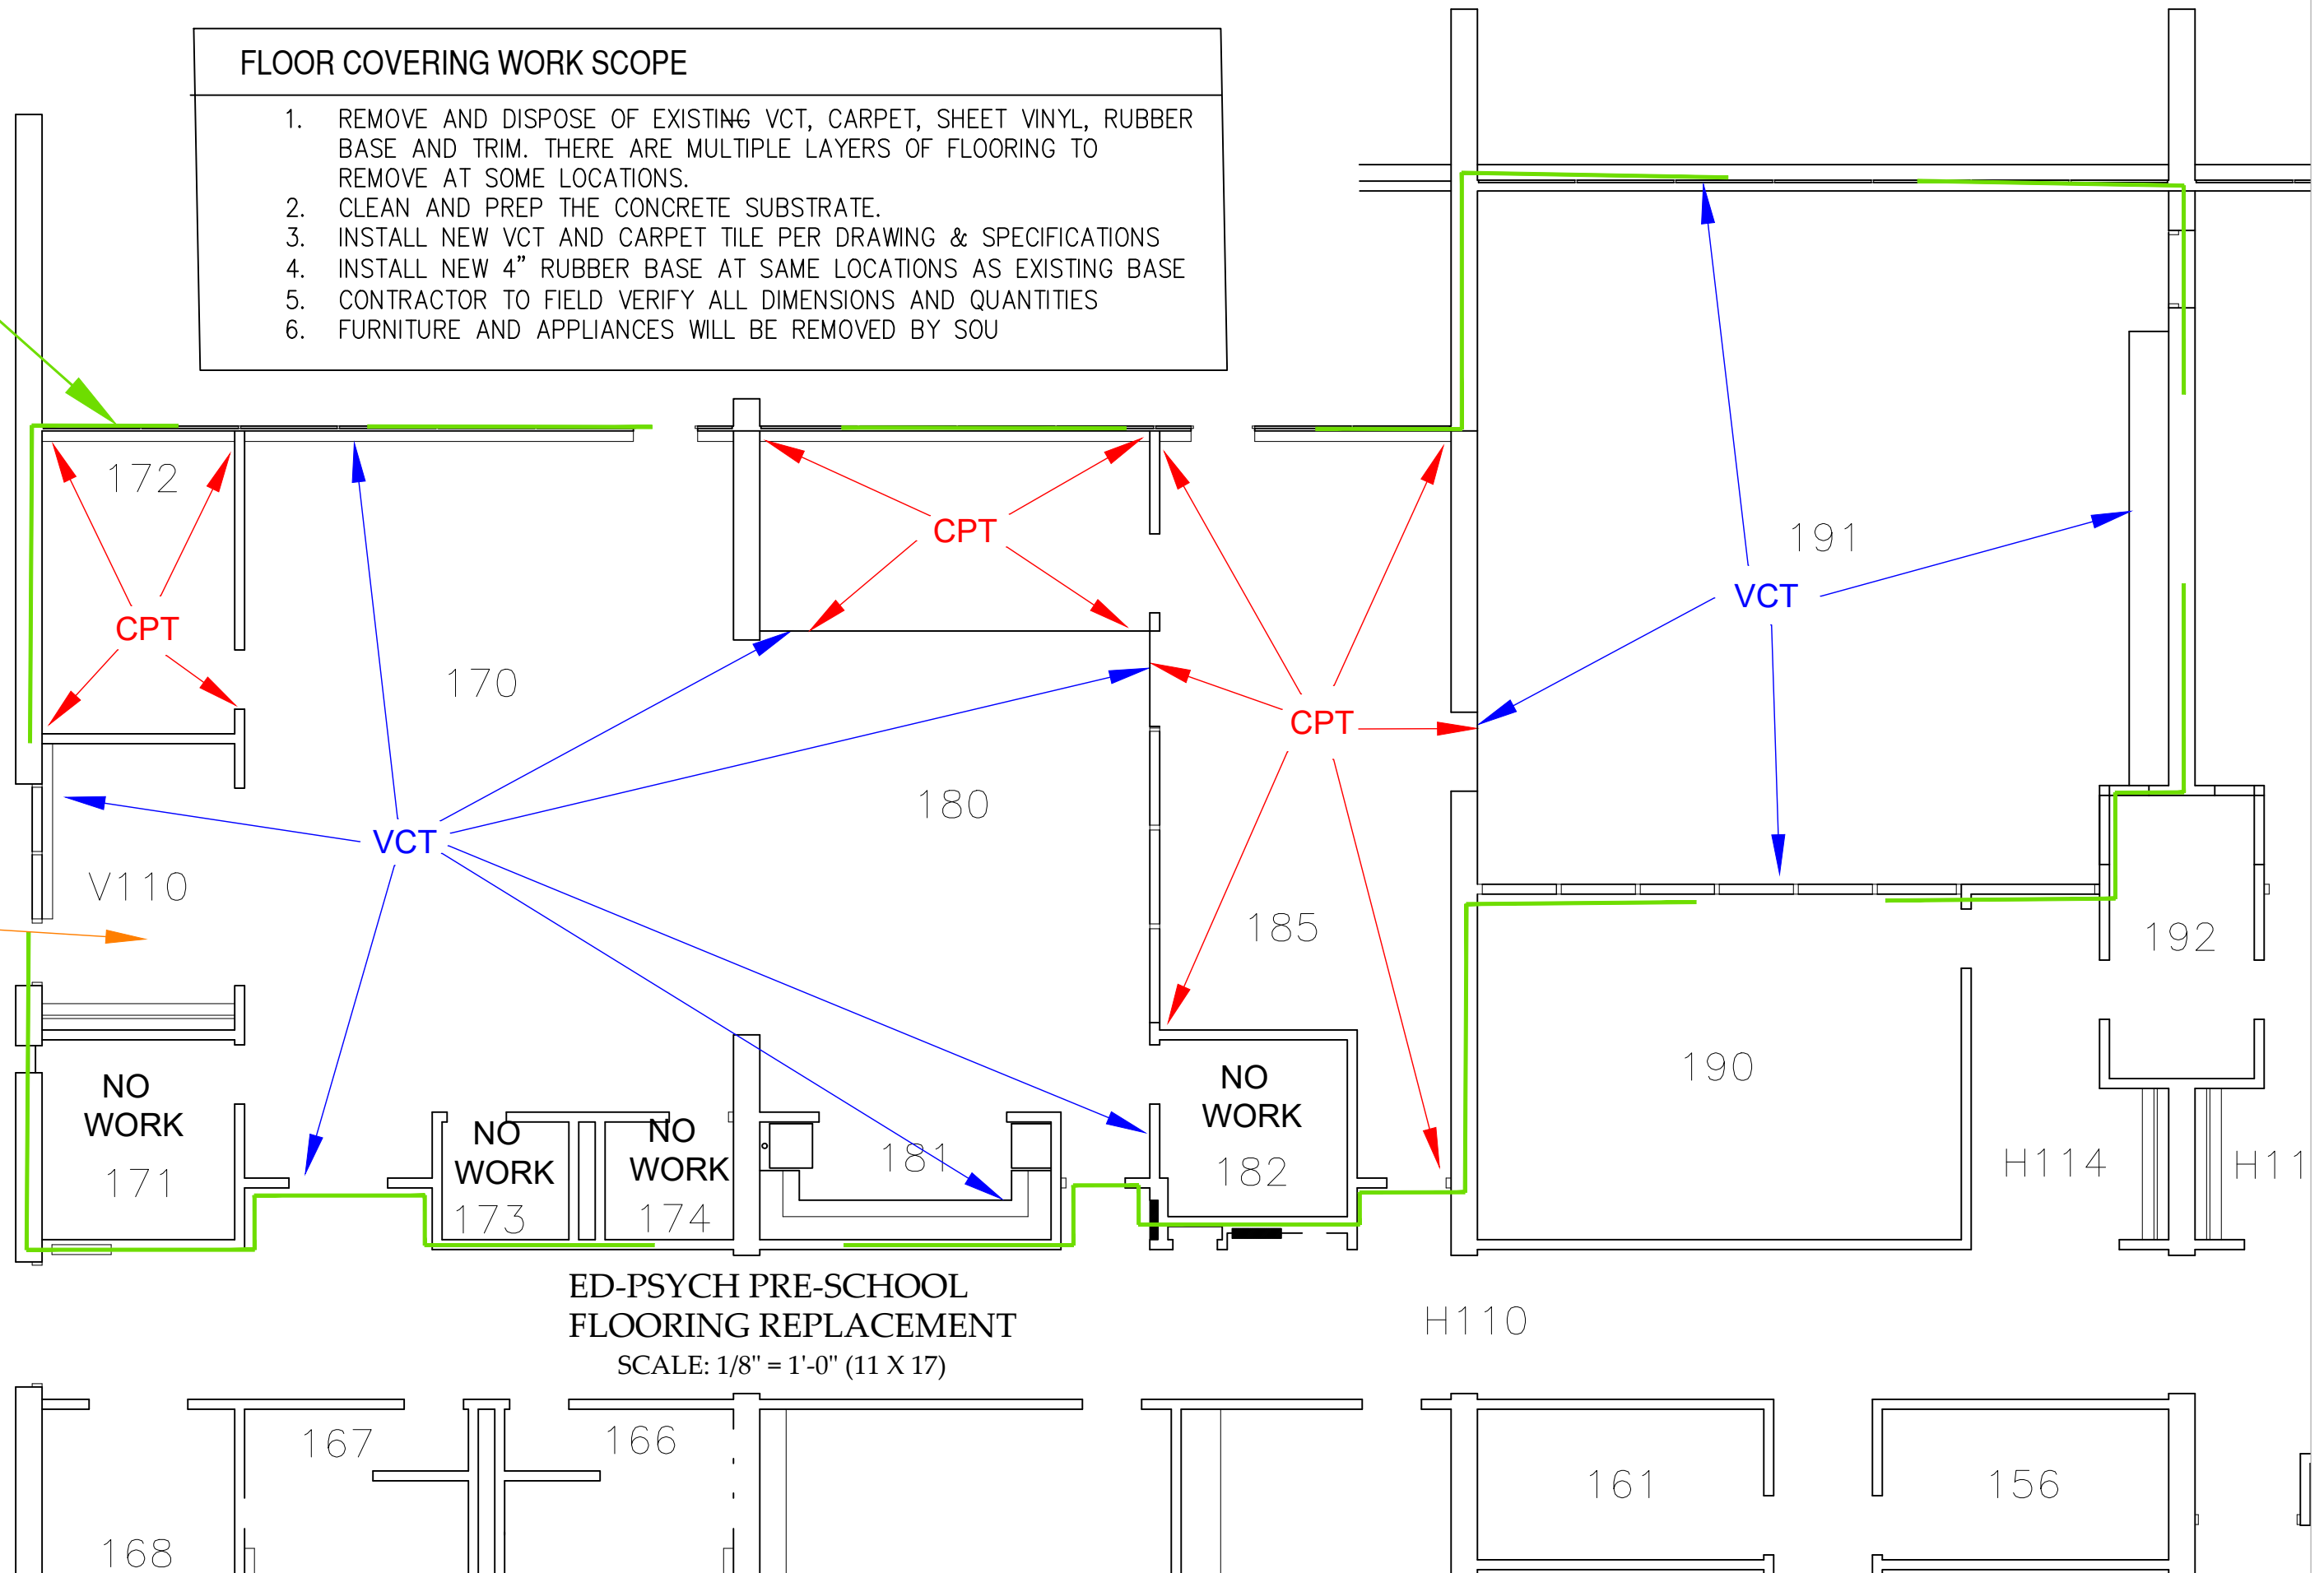

**ED-PSYCH PRE-SCHOOL  
FLOORING REPLACEMENT**  
SCALE: 1/8" = 1'-0" (11 X 17)